


## **GENERAL GUIDELINES**

- 1. Do not operate this unit without either water or cleaning fluid in the tank as damage may occur.
- 2. Do not use any corrosive cleaning fluid with strong acidity or alkalinity to avoid damage to the tank.
- Before turning on the heating function fill the tank 1/2 2/3 full with water or cleaning fluid to prevent damage from the heating element.
- 4. Do not allow any objects or cleaning fluid to enter inside of the machine.
- 5. Do not operate the unit continuously for more than 99 minutes and please wait more than 30 minutes before next use, otherwise the lifetime of the unit will be shortened.
- 6. Whenever emptying or replacing water or cleaning fluid, make sure that the water or cleaning fluid in the tank is at room temperature or cool. Also be sure to turn off the device and unplug the power cord during this process.
- 7. After finished using, wipe down the stainless steel tank and housing with a clean dry cloth. DO NOT wash the unit with water directly.
- 8. This unit should be stored in a cool dry place, away from any heat sources and moisture.

## **OPERATION INSTRUCTIONS** PART 1 \_\_\_\_ Place the unit on a flat and stable working platform. 1 T Please add enough cleaning fluid (usually water) to the tank to completely immerse the items to be cleaned. The fluid level in the tank should always be about 2/3 full. Connect the grounded power cable, the backlight of the LCD display will illuminate, If no setup parameters need to changed ,you can simplely press the ON/OFF button to start the cleaning. If you would like to reset the heating temperature, timer or power level, please refer to the instructions below. $\sim$ First press the SET 🕝 button to select the item you wish to set up, with each press of the button, the 3 items will flash in the following order: SETTEMP $\rightarrow$ TIMER $\rightarrow$ POWER Once the desired item is flashing, use the adjustment buttons (A) **∮**(▲)(▼) to set the parameter (item will time out and stop flashing if left untouched for more than 10 seconds.) TTING THE TIMER MM\_MF �\#\\#\°\\\ Press the SET ( button until the TIMER window sarts flashing, then וששישש use the adjustment buttons ( ) to select your desired cleaning time. The time range is adjustable from 1 to 99 minutes (Each button press will adjust the timer by 1 minute or you can hold for continuous) SETTING THE ULTRASONIC POWER

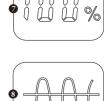



Press the SET  $\bigcirc$  button until the POWER icon is flashing, then use the adjustment buttons (•) to select your desired power level. The power level is adjustable from 10% to 100% (Each button press will adjust the power level by 10% or you can hold for continuous)


Press the  $\bigcirc$  press the button to switch on the ultrasonic function, the  $\xrightarrow{\text{thresself}}$  icon will light up. Press the button a second time will turn off the ultrasonic function and the light will go out.


## **TABLE OF CONTENTS**

TABLE OF CONTENTS2
FEATURES AND ACCESSORIES
GENERAL GUIDELINES4
COMMON APPLICATIONS
SPECIFICATIONS
SPECIFICATIONS7
PANEL OVERVIEW8
OPERATING INSTRUCTIONS9
SETTING THE TIMER9
SETTING ULTRASONIC POWER9
SETTING THE TEMPERATURE10
SWEEP FUNCTION10
DEGAS FUNCTION10
SLEEP MODE10
MEMORY FUNCTION10
2

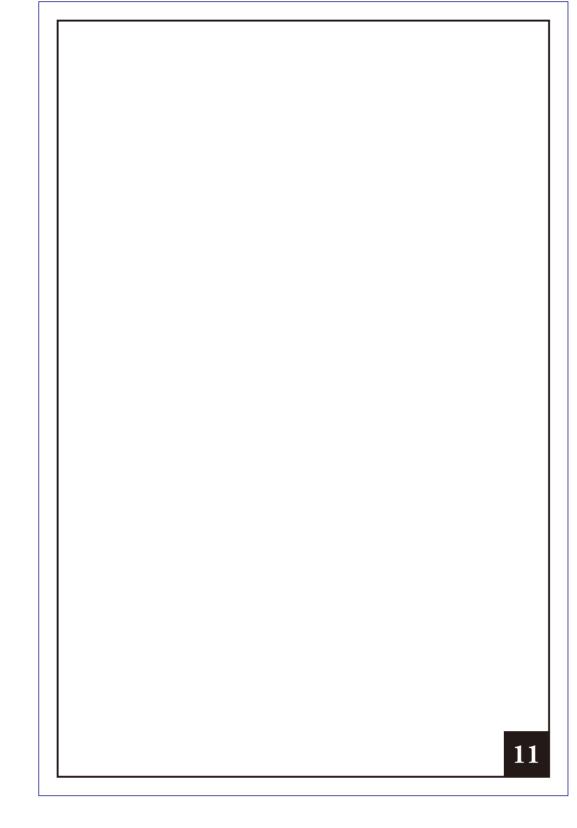

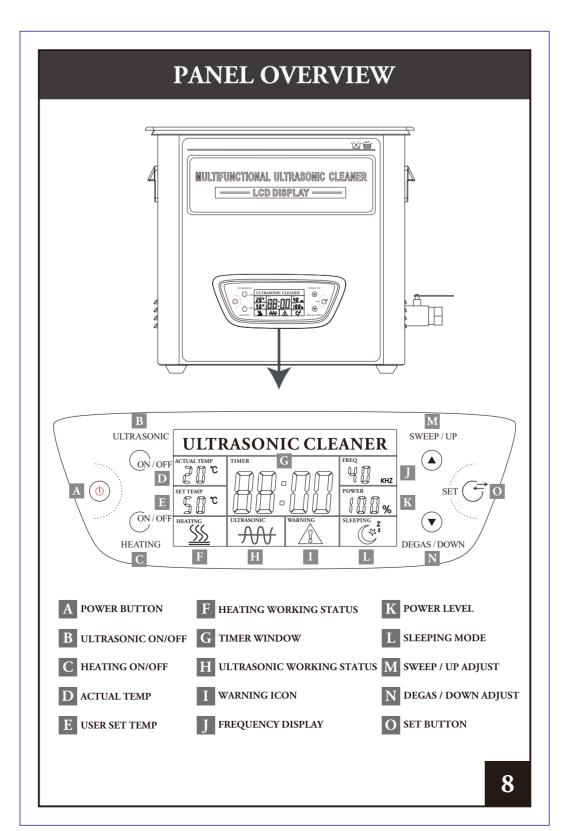

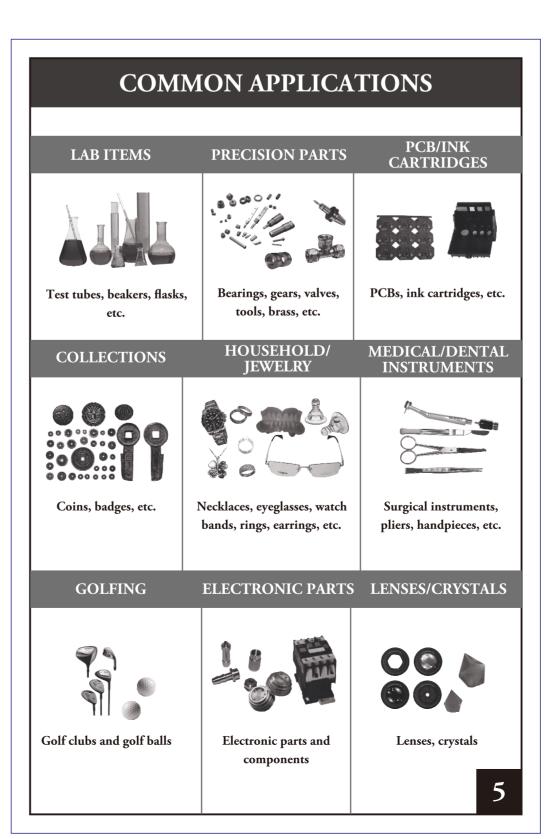

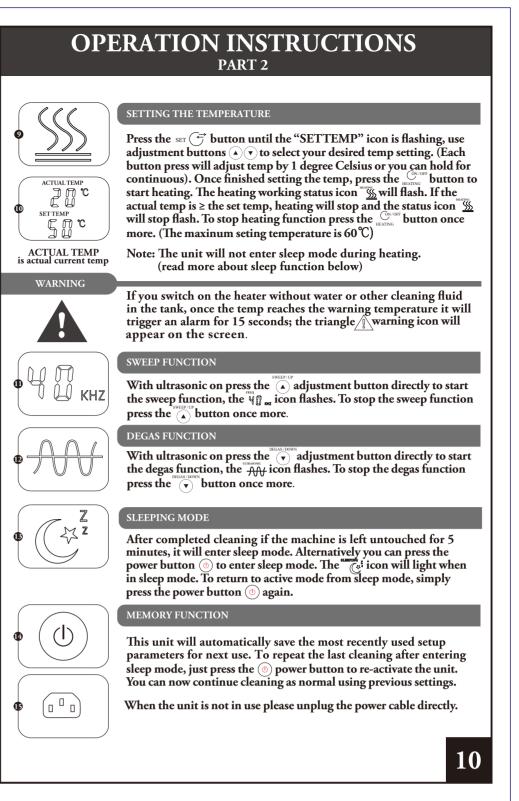

*NO POWER INLET FOR MODEL TUC-450.										
TIMER SETTING	1-99Mins									
TT SE1	1-9	1-9	1-9	1-9	1-9	1-9	1-9	1-9		
FREQ	40KHz									
	40	40	40	40	40	40	40	40	-	
EATING RATE POWER - Max.	200 W	500W	500W	500W	500W	500W	500W	1000 W		
	20(	50(	50(	50(	50(	50(	50(	100		
IIC F R - Max.										
ULTRASONIC TED POWER - N	180 W	240 W	240 W	360 W	360 W	480 W	600 W	720 W		
ULTRASONIC F RATED POWER - Max.						7	•			
(*)	mm	um	uu	mm	um	nm	uu	uu		

10L 15L 20L

150

TUC-

ÚC.

TUC-

22

30

300

5

7L

	KHz 80.00	TIMER SETTING	1-99Mins	1-99Mins	1-99Mins	1-99Mins	1-99Mins	
	H M MHz	FREQ	40KHz	40KHz	40KHz	40KHz	40KHz	
SNC		HEATING RATED POWER - Max.	30 W	60 W	100 W	100 W	200 W	
SPECIFICATIONS		ULTRASONIC HEATING RATE RATED POWER - Max. POWER - Max.	70 W	70 W	120 W	120 W	$180  \mathrm{W}$	
SPE(		TANK SIZE	150×135×65mm	150×135×100mm	240×135×100mm	240×135×150mm	300×150×100mm	
		CAPACITY -Max.	1.3 L	2L	3.2 L	4.8L	4.5 L	
		MODEL	TUC-13	TUC-20	TUC-32	TUC-48	TUC-45	6

## 1

FEATURES AND ACCESSORIES

